




# Quick Installation Guide

## X3-Hybrid 5.0KW-15.0KW

### I Packing List

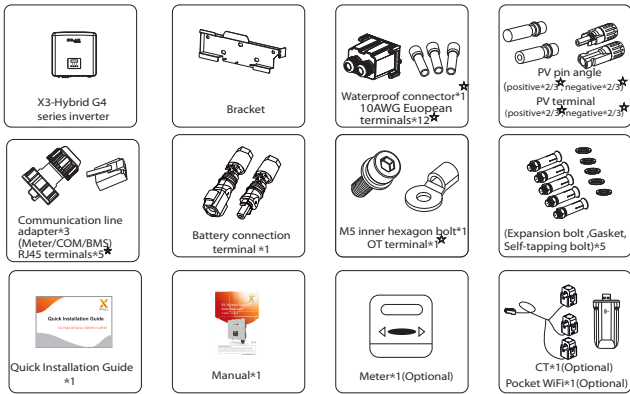


Note: \* Attachments are not included in the M series inverter attachment package and will be included in the X3-Matebox.  
 \* The inverter in Australia needs to be connected to DRM, which is 1 more communication line adapter than that in other countries.  
 \* The number of "D" and "E" are different for different power sections. For 5-6kW inverters, the number of positive and negative PV terminal and PV pin angle is 2, 2, 2 and 2 respectively. For 8-15kW inverters, the number of positive and negative PV terminal and PV pin angle is 3, 3, 3 and 3 respectively.


### II Tool Preparation




### III Mounting Steps

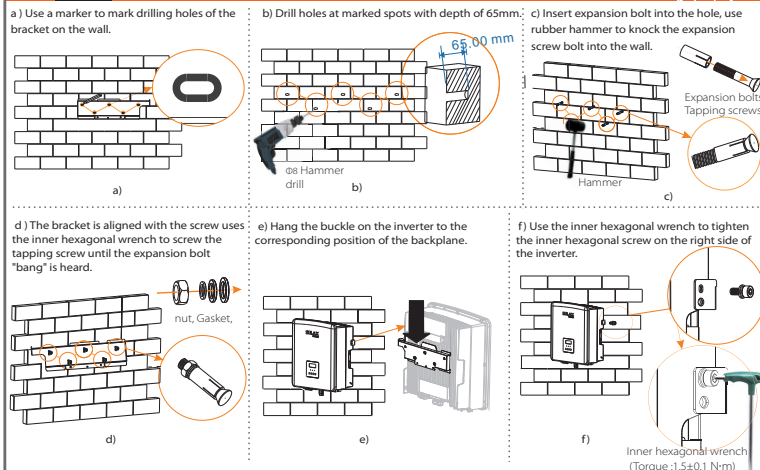



### IV PV Connection

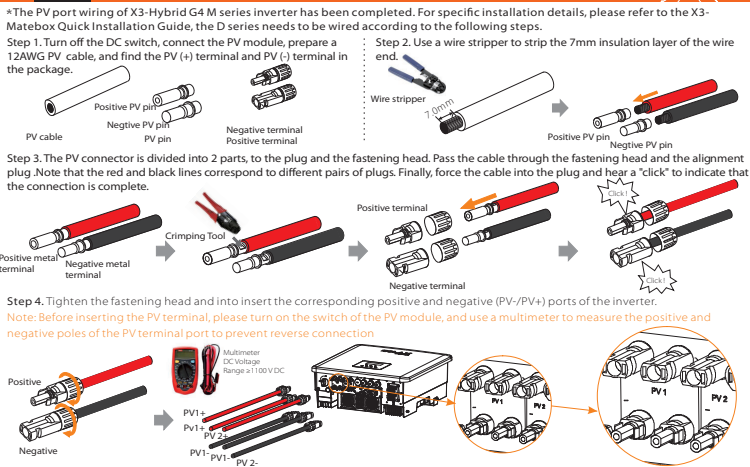

### V Grid and Off-grid Connection

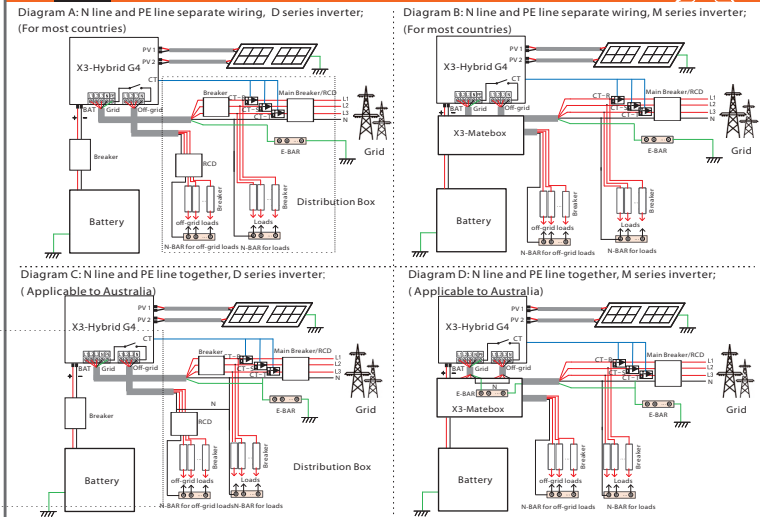


### IV Battery Connection

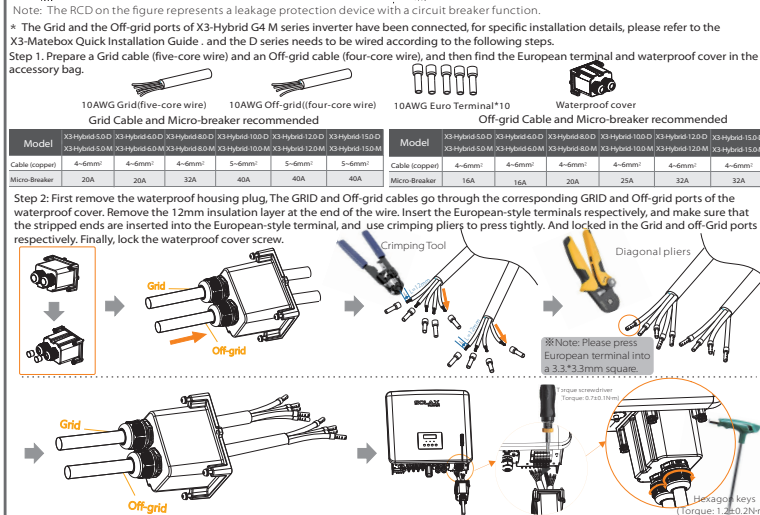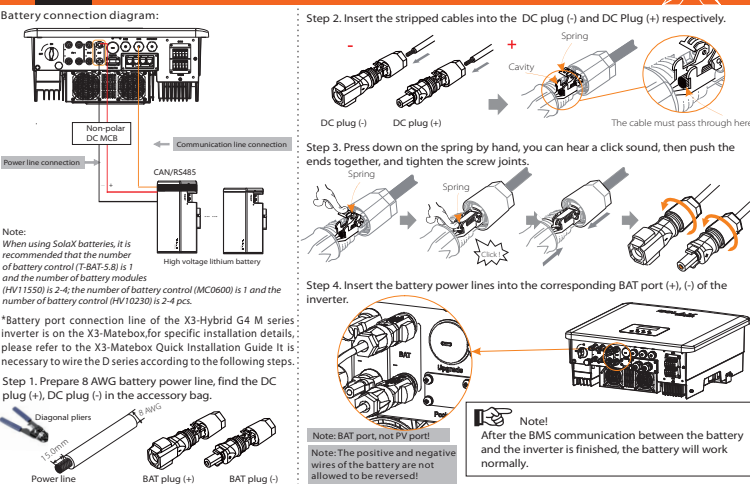


## VI Communication Connection (BMS/Meter/CT/COM/DRM)


Electric meter connection diagram

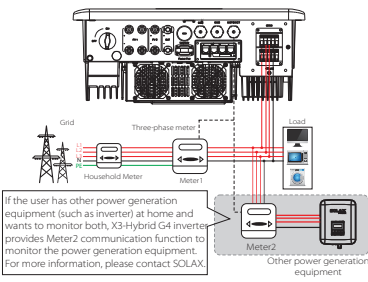

CT connection diagram

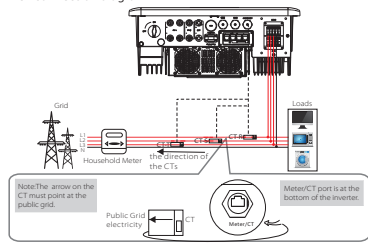

 LCD settings  
To select CT, you need to enter Use setting, then enter CT/Meter Setting.




Meter/CT PIN is defined as follows:

1	2	3	4	5	6	7	8
CT-R1	CT-S	CT-T1	48SA	48SE	CT-T2	CT-S2	CT-R2

Note!  
Only one of the Meter and CT connections can be selected. Meter cable goes to pin terminal 4 and 5; CT-R cable to PIN Terminal 1 and 8; CT-S cable to PIN Terminal 2 and 7; CT-T cable is connected to terminals 3 and 6.

 1) To connect the Communication line of the CT line, the lines need to be made on both sides, connecting the RJ45 terminal on one side and the Communication line Adapter on the other.



2) One side of the finished cable. Communication line adapter is inserted into the inverter, and one side of the RJ45 terminal is inserted into the CT connection.

Note!  
When installing, pay attention to water resistance. All the connected parts of CT must be put into the distribution cabinet.



COM Communication



COM PIN Definition

1	2	3	4	5	6	7	8
DRM1/AN	DRM2/AN	DRM3/AN	+13V	48SA	48SE	GND	DRM4/ALAN





The BMS pin is defined as follows:

1	2	3	4	5	6	7	8
X	X	X	BMS_CAN	BMS_CANL	X	BMS_48SA	BMS_48SE



The DRM pin is defined as follows:

1	2	3	4	5	6	7	8
DRM1/S	DRM2/S	DRM3/S	DRM4/S	+3.3V	DRM0	GND	GND

   Communication Connection Steps  
Step 1. Prepare a communication cable, and then find the communication adapter in the accessory bag.

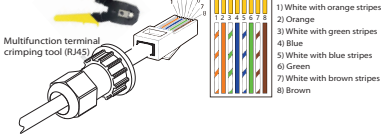


Step 5: Insert the communication line (CAN/DRM/SHUT) into the corresponding port, lock the cover plate, and tighten the fastening head. Finally, the corresponding COM, METER, CT and BMS can be found to insert the corresponding ports of the inverter communication cable.

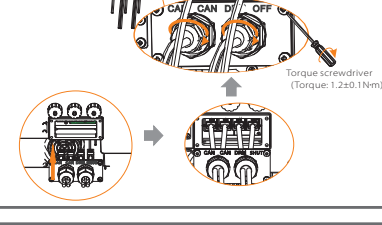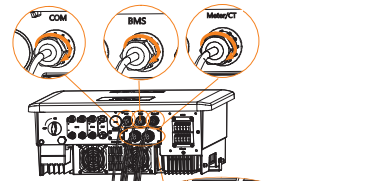

## IX Grounding Connection (mandatory)


The ground wire port of X3-Hybrid G4 M series inverter has been connected, and the D series needs to be wired according to the following steps.

Step 1. Prepare a one-core cable (12AWG), and then find the ground terminal in the accessories.  
Step 2. Strip the grounding cable insulation (length "L2"), insert the stripped cable into the ring terminal, and then clamp it.

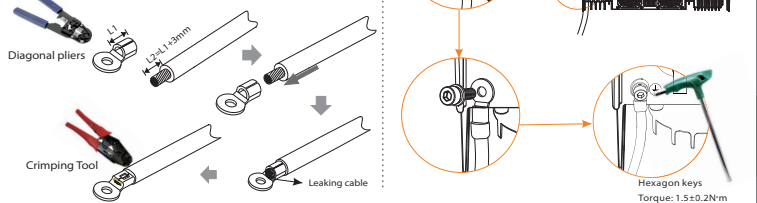

## VII Monitoring Operation

DONGLE connection diagram

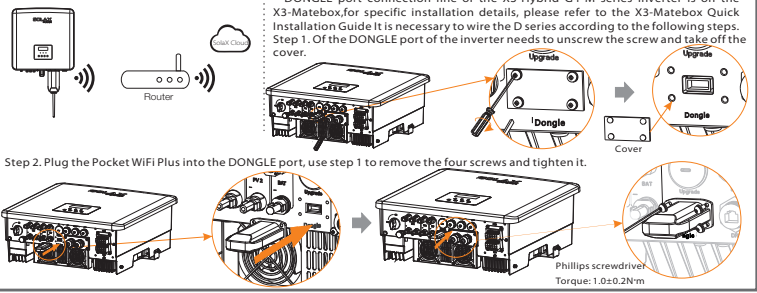

## VIII Start Guide

**1. Set date time**

Date time: 2017-06-06 10:19

**2. Set language**

Language: English, Deutsch, Italian

**3. Set the safety standard**

Safety Country: >VDE0126

**4. CT/Meter Setting**

CT/Meter Setting: >Meter

**5\*. Set export control**

Export Control Use Value: 10000W

**6\*. Set work mode**

Work Mode: >Mode Select self use

**7. X3-Matebox Setting**

X3-Matebox Setting: >disable enable

**5\*. Export Control**

This function allows the inverter able to control energy exported to the grid. There are user value and factory value. The factory value is default which can not be charged by the user. The user value set by installer must be less than the factory value.

**6\*. Set work mode**


There are 4 work modes for choice. Self use/ Back Up Mode/ Feed in Priority/ Force Time Use. All these work modes is available for on-grid condition only:

Name	Description
Self Use	The self-use mode is suitable for areas with low feed-in subsidies and high electricity prices. (1) When the power of PV is sufficient, Active Charging or discharge time period: PV will power the loads firstly, and surplus power will charge to the battery. If the battery is fully charged, then sell the surplus power to the grid. The inverter will limit the output if feed-in limit or zero feed-in is needed. (PV + Load, PV + Load + Battery + Grid) (2) When the power of PV is insufficient, Active Charging time period: PV will power the loads firstly, the remaining power will be taken from the grid, the battery will not discharge at this time (PV + Load, PV + Grid + Load) (3) Without PV power, Active Discharge time period: The grid supplies the loads and also can charge the battery (PV + Grid + Load + Battery) (4) Active Discharge time period: The battery will power the home loads firstly, if the battery power is not enough, the remaining power will be taken from the grid. The inverter will enter into the standby state (PV + Battery + Grid + Load) Battery min SOC can be set: 10%~100%.
Feed-in priority	The Feed-in priority mode is suitable for areas with high feed-in subsidies, but has feed-in power limitation. (1) When the power of PV is sufficient, Active Charging time period: PV will power the loads firstly, and surplus power will feed-in to the grid. If the feed-in power has been limited, the surplus power can charge the battery (PV + Load, PV + Load + Grid + Battery) (2) When the power of PV is insufficient, Active Charging time period: PV will power the loads firstly, the remaining power will be taken from the grid. The battery will not discharge (PV + Load, PV + Battery + Grid + Load) (3) Without PV power, Active Discharge time period: The grid supplies the loads and also can charge the battery. (PV + Grid + Load + Battery) (4) Active Discharge time period: The battery will power the home loads firstly, if the battery power is not enough, the remaining power will be taken from the grid. The inverter will enter into the standby state (PV + Battery + Grid + Load) Battery min SOC can be set: 10%~100%.
Backup mode	The back-up mode is suitable for areas with frequent power outages. Same working logic with "Self Use" mode. This mode will maintain the battery capacity at a relatively high level (user's settings) to ensure that the emergency loads can be used when the grid is off. Customers no need to worry about the battery capacity. Battery min SOC can be set: 10%~100%. Backup mode: SOC adjustment range: 30%~100%. In Backup mode, SOC min under off-grid condition is 10%, which cannot be modified.
Off-grid	The off-grid mode is used when the power grid is off. System will provides emergency power through PV and batteries to supply power to the household loads. (Battery is necessary) (1) When the power of PV is sufficient, Active Charging time period: PV will power the loads firstly, and surplus power will charge to the battery (PV Load, PV Load + Battery) (2) When the power of PV is insufficient, The remaining power will be taken from the battery (PV Load, PV + Battery + Grid + Load) (3) Without PV power, The battery will power the emergency loads until the battery reached the min SOC, then the inverter will enter into the idle mode (PV + Battery + Load)

## IX Start Inverter

Start inverter

After the inverter is checked, the inverter will take the following steps:  
Applies to most countries

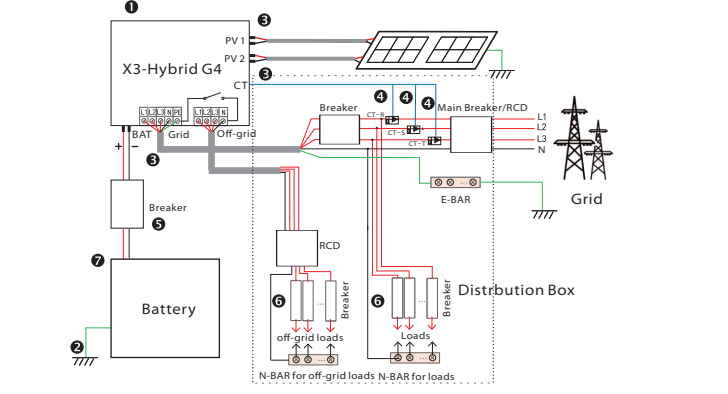

- Make sure that the inverter is fixed on the wall.
  - Ensure that all ground wires are grounded.
  - Confirm that all DC lines and AC lines are connected.
  - Make sure the CT are connected.
  - Make sure the battery is well connected.
  - Turn on the Load switch and Off-grid switch
  - Turn on the battery switch.
- Long press Enter for 5 seconds to exit the shutdown mode. Mode is the mode when it is turned off for the first time; factory default: off mode)

Note: The RCD on the figure represents a leakage protection device with a circuit breaker function.

## X Firmware Upgrading

In order to upgrade the firmware smoothly, if the DSP and ARM firmware needs to be upgraded, please note that ARM firmware must be upgraded first, then DSP firmware.  
-Make sure that this directory is completely consistent with the above table, do not modify the firmware file name. Otherwise, the inverter may not work.  
-For X3-Hybrid G4, ensure that the PV input voltage is greater than 180V (upgrade on sunny days), please ensure that the battery SOC is greater than 20% or the battery input voltage is greater than 180V. Otherwise, it may cause serious failure during the upgrade process.  
-If the ARM firmware upgrade fails or stops, please do not unplug the U disk and power off the inverter and restart it. Then repeat the upgrade steps.

Upgrade preparation  
1) Please check the inverter version and prepare a U disk (USB 2.0) and personal computer before upgrading.  
2) Please contact our service support through service@solaxpower.com to obtain the firmware, and store the firmware in the U disk according to the following path:  
Update:  
For ARM file: update\ARM\618.00406.00\_Hybrid\_X3G4\_ARM\_V1.01.0710.usb;  
For DSP file: update\DSP\618.00405.00\_Hybrid\_X3G4\_DSP\_V1.01.0710.usb;

Upgrade steps  
Step 1. Please save the "Update" firmware in your U disk first, and press the "Enter" button on the machine screen for 5 seconds to enter the shutdown mode. Then unscrew the waterproof cover, insert the U disk into the "upgrade" port at the bottom of the inverter.  
Step 2. Locate the "update" port of the inverter, use a flat-blade screwdriver or coin with the same width to remove the waterproof cover, and insert the U disk.

